


BLT60 Busylight

What Does Busylight Work For?

With its star/heart/square shape light guide, people around you can always know your working stat no matter which one you choose. It synchronously displays the current desk phone/softphone presence state with the colors. For example, when BLT60 turns red, you are on a call, and people will not interrupt you.


In addition, the Yealink BLT60 has a 1.8m long cord, allowing you to place the light wherever it's easily seen, for example, the corner of your desk or the PC monitor. When you are away from your desk while the Yealink BLT60 is flashing red, you can still know here comes the call and never miss it, even if there is no bell reminder.

Package Content

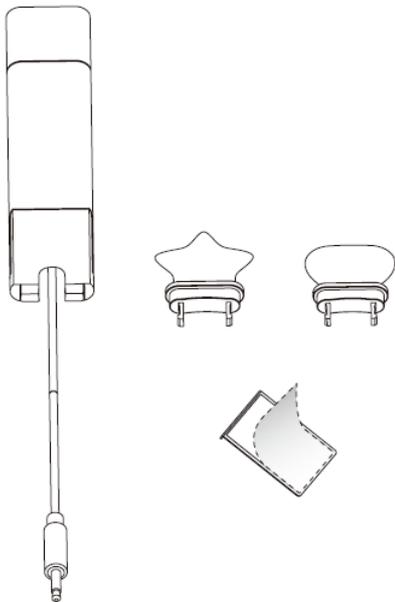


How to Use


1. Install the BLT60 Busylight.

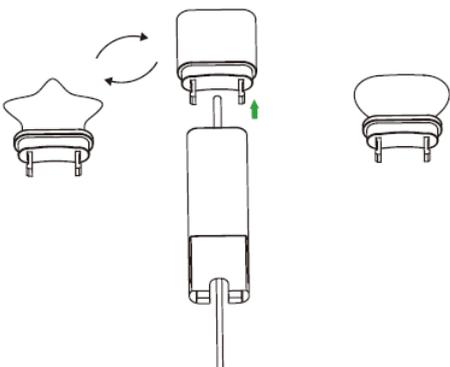

2. At the left back of the base station, there is an interface for you to connect busylight BLT 60. Please do not mess it up with the power supplier interface though they are very similar. When the BLT60 light turns up, that means it is connected correctly.

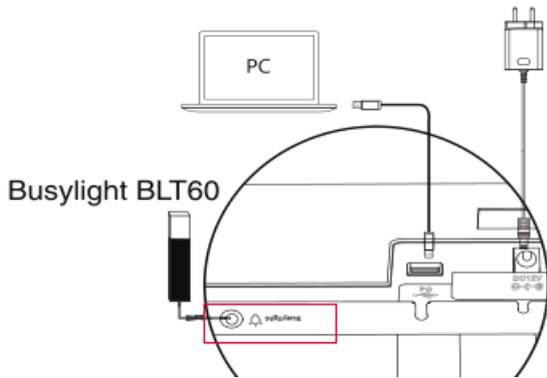

3. Stick to the device.

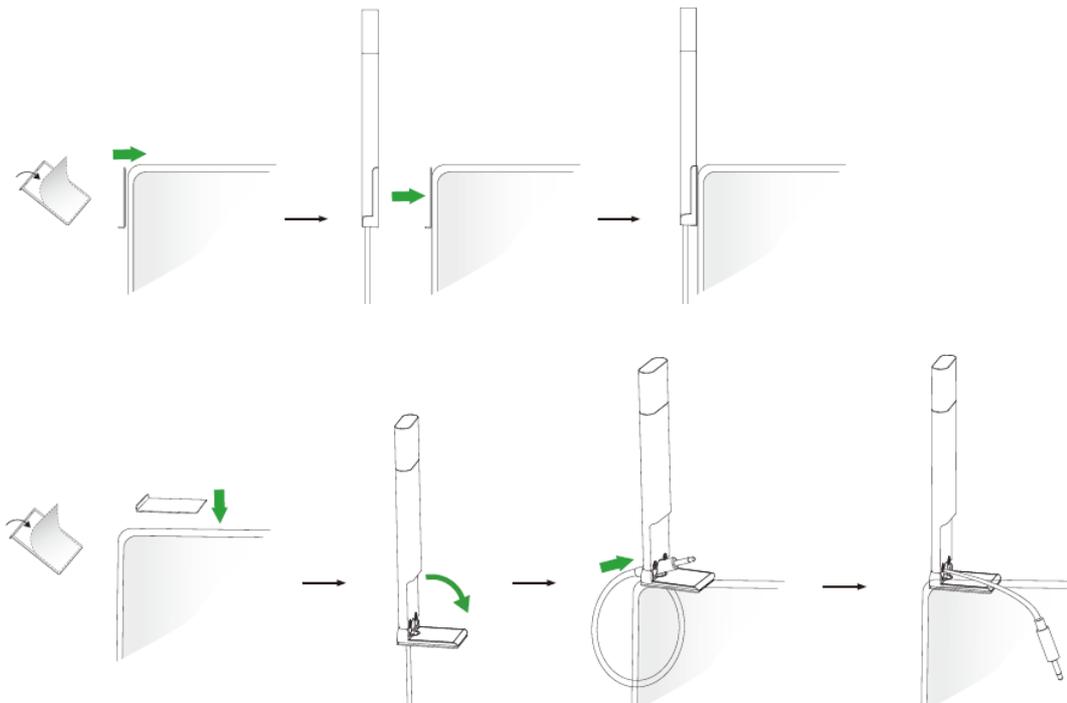

LED Indicator

The phone can use optional accessories when you need to extend your phone's capabilities. The accessories need to be purchased separately if required for your phone:

- **Online Status** (sync status requires softphone support)

LED Indicator	Description
Solid green	Available
Solid orange	Away
Solid red	DND/Busy

Off	Turn off the busylight, but softphone does not support
-----	--

- **Talking Status**

LED Indicator	Description
Flash red	Ringling
Solid red	In a call
Flash green slowly	Missed call/voice message notification (this requires softphone support)
Off	Softphone does not support, turn off the busylight